


# SpectroEye KeyWizard 2.11 Settings

Please use the below settings for the KeyWizard Version 2.11 and the SpectroEye, to get the values of the densitometry sequence functions (e.g. Dot Gain and Trapping) to any Windows application.

## KeyWizard 2.11

**Important:** The SpectroEye densitometry sequence functions (Dot Gain, Trapping, ...) are **ONLY** with KeyWizard Version 2.11 supported. Other, even later versions do not support these functions.

### KeyWizard Settings – Program

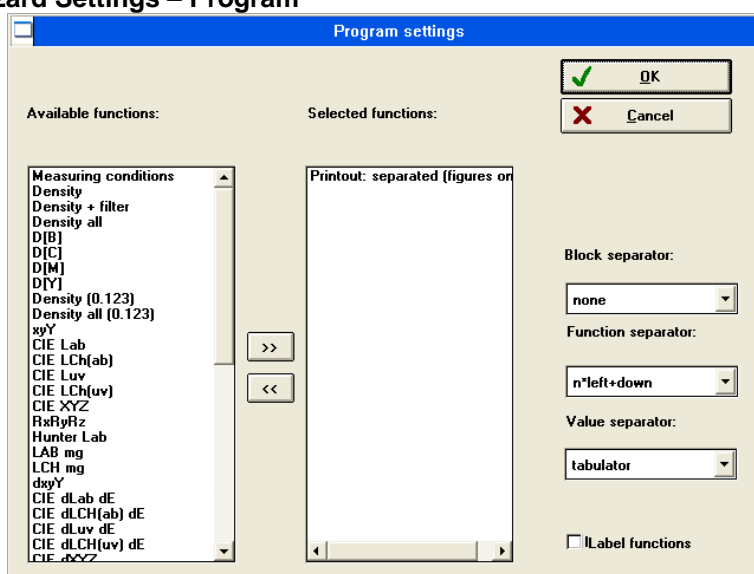

## SpectroEye

**Important:** Please make sure you are using the latest SpectroEye firmware version (1.44 or later).

### SpectroEye Settings

Make the following setting in the SpectroEye menu: Main Menu>Settings>User defined>Printer

- Printer type: No formatter
- Every measurement: On
- Date and time: Off

